

DISC BRAKE

Wheel spoke lacing

Rotating direction of wheel

Check that the spokes have been laced as shown in the illustration.

- (w)** Front left
- (x)** Rear left
- (y)** Rear right
- (z)** Front right

NOTICE

A radial assembly cannot be used. Refer to [1] for spoke arrangement of the left side of the front wheel (disc brake rotor mounted side) and both sides of the rear wheel; refer to [2] for spoke arrangement of the right side of the front wheel.

Installation of the disc brake rotor

Center lock type

For quick release type

- (A)** Disc brake rotor fixing lock ring
- (B)** Lock ring tightening tool

Tightening torque

40 - 50 N·m

	Internally serrated type	Externally serrated type	Internally and externally serrated type
Disc brake rotor fixing lock ring			
Lock ring tightening tool	TL-LR15 Adjustable wrench	TL-FC36	TL-FC36/TL-LR11 Adjustable wrench